

6. PRECAUTIONS

Don't give this toy to children aged 3 or below. Like other electric devices, this device is also to be used in a safe way to avoid electric shock. Please don't try to modify this device, which may negate your authority to use it.

7. DISPOSAL INFORMATION

Never dispose of the toy along with the household waste. If / When you decide to dispose of this toy, discard it in e-waste container that are in accordance with the local environmental laws, guidelines and battery recycling procedures.



WARNING! CHOKING HAZARD Small Parts.
Not suitable for children under 3 year old.
Adult supervision required.



Manufactured by:

MIRANA INNOVATIONS PRIVATE LIMITED

201, Plot No. T33, T Block, MIDC Road, Bhosari, Pune, MH, India - 411 026.

For Feedback and complaints, contact us at support@miranatoys.com



www.miranatoys.com



AIR FOOTBALL NEON



C-TYPE USB RECHARGEABLE
WITH FAST CHARGING



COLOURFUL RAINBOW
EFFECT OF LED LIGHTS



BUILT-IN 1200 mAh
LI-ION BATTERY



STRONG DURABLE BODY THAT
WITHSTANDS UP TO 50 KILOS



3 SPEED MODES
FOR EASY PLAY



PLAY ON ANY
SMOOTH SURFACE



ATTRACTIVE
LOOK



FOR AGES
4 & ABOVE

WELCOME

Please read this document and the safety instructions carefully
before using the all-new Mirana Air Football Neon.

Fully charge the battery before using it for the first time.

For detailed support information, visit our website

www.miranatoys.com

1. PLAYING INSTRUCTIONS

The Mirana Air Football Neon works best on smooth surface. Turn on the power button of your Mirana Air Football Neon given at its bottom when the device is fully charged. Don't play by the roads or in any other dangerous places to avoid accidents. Don't play in a place with rough surface, puddle, mud or sand.

2. SWITCH ON / OFF

Press the power button for 1 second to switch on, press the power button for 3 seconds to switch off.

3. BUILT-IN BATTERY & CHARGING


The Mirana Air Football Neon comes with a rechargeable 1200 mAh Li-Ion battery. Don't attempt to modify, remove or replace the battery as it may damage your Air Football Neon and cause overheating and injury. Don't cut, tear, puncture, compress or deform the device by disassembling it.

Follow the below instructions for charging its battery:

1. Turn off the product before charging the battery.
2. Turn the Mirana Air Football Neon upside down to check the charging port.
3. Plug the C-Type USB charging cable provided in the box into the (5V-2A) DC input charging slot at the bottom of the device.
 - Red LED will glow up while charging.
 - Green LED will glow up when your Air Football Neon is fully charged (It takes about 120 minutes to charge fully).



C-Type USB Charging Cable

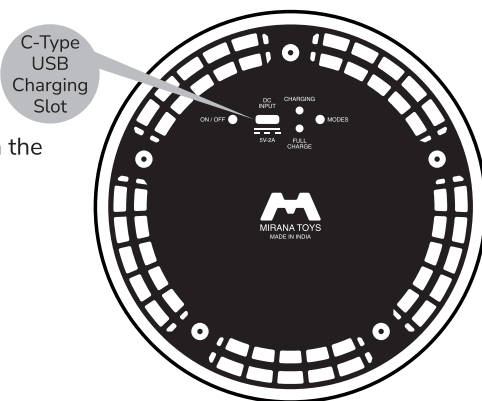

4. Remove the charging cable when the Green LED glows up.

The built-in battery cannot be replaced and must be recycled or disposed off separately from household waste if needed.

4. SPEED MODES

The 'Modes' button at the bottom of your Air Football Neon lets you play with different speed modes. You can select from different modes by pressing the 'Modes' button.

Mode 1: Fast speed hover


In this mode, your Air Football Neon will hover in fast speed.

Mode 2: Medium speed hover

In this mode, your Air Football Neon will hover in medium speed.

Mode 3: Lights

In this mode, your Air Football Neon won't hover but the lights will keep blinking.

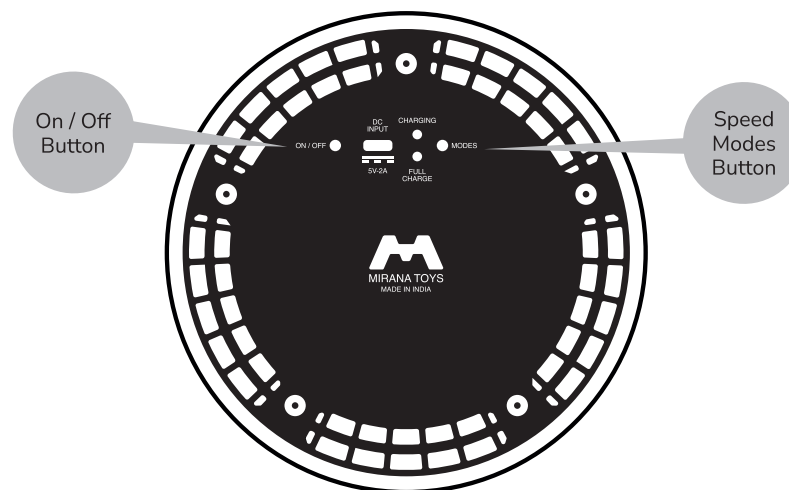

5. CARE AND MAINTENANCE

Keep your Air Football Neon away from direct sunlight, high humidity, high temperature or excess heat. Gently wipe the base of your toy with a damp cloth whenever it becomes dirty. Do not immerse the Air Football Neon in water to clean it. This can damage its electronic components. Before using the Air Football Neon, please ensure that it is not damaged and safe to use. The operating temperature is between -10°C and 50°C.