

Rechargeable batteries of this toy car should be charged under adult supervision only. While charging the toy, do not touch the electric outlet and the charging port with bare/wet hands to avoid electric shock. Do not use damaged electric outlets for charging batteries. Adults should examine the USB cable, plug, enclosure or other parts of the toy regularly. Strictly adhere to this instruction manual while operating the toy.

6. CARE AND MAINTENANCE

Always remove batteries from the remote control console when they have drained out completely or are not in use for a longer period of time. Keep it away from direct sunlight, high humidity, high temperature or excess heat. Ensure that the tyres are clean for optimized grip. Gently wipe the tires with a damp cloth whenever they become dirty. Do not immerse the toy or any part of it in water to clean it. This can damage its electronic components. Before using the toy car, please ensure that it is not damaged and safe to use.

7. DISPOSAL INFORMATION

Never dispose of the toy along with the household waste. If / When you decide to dispose of this toy car, discard it in e-waste container that are in accordance with the local environmental laws, guidelines and battery recycling procedures.

Manufactured by / Packed by / Marketed by & Customer Care Executive Address:

MIRANA INNOVATIONS PRIVATE LIMITED

719, Warehouse-5, Titanium Logistics Park, Rajoda, Bavla, Ahmedabad,
GJ, India - 382 220.



www.miranatoys.com



DUSTER

4WD WITH SMOKE EFFECT



2000 mAh
BATTERY



C-TYPE
USB CHARGING



SMOKE
EXHAUST



1.5X NITRO
SPEED BOOST



2.4
GHz
LONG RANGE
REMOTE CONTROL



ALL-TERRAIN
TYRES



DURABLE
SHOCKS



DURABLE
MATERIAL



SMOOTH
SUSPENSION



4 WHEEL
DRIVE



1:16
SCALE



FOR AGES
4 & ABOVE

WELCOME

Please read this document and safety instructions carefully
before using the all-new toy car.

Fully charge the battery before using it for the first time.

For detailed support information, visit our website

 
www.miranatoys.com

1. BUILT-IN BATTERY

The toy comes with a rechargeable 2000 mAh battery. Don't attempt to modify, remove or replace the battery as it may damage it and cause overheating and injury. Don't cut, tear, puncture, compress or deform the toy by disassembling it.

Follow the below instructions for charging its battery:

1. Turn the toy upside down to check the charging port.
2. Plug the USB charging cable provided in the box into the (5V-2A) DC input charging slot at the bottom of the toy.
3. Red LED will glow up while charging.
4. Green LED will glow up when the toy is fully charged.
5. Remove the adapter when the Green LED glows up.
6. The toy will not charge if it is on. To charge switch off the toy first.

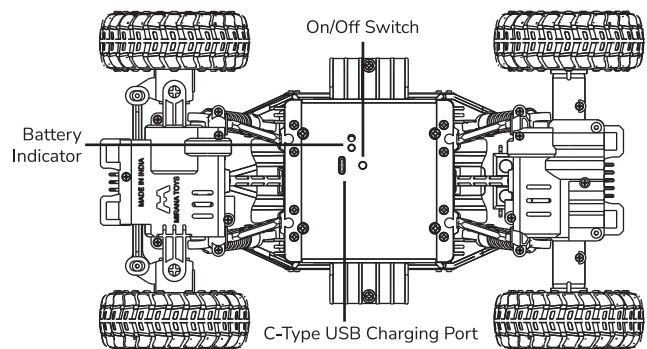


2000 mAh Rechargeable Li-Ion Battery (Included)

2. REMOTE CONTROL BATTERY INSTALLATION

For the toy remote, you need to install 2 batteries of 1.5V "AA" type.

 
1. Carefully install new batteries (+/-) inside the compartment.
2. Securely place the battery compartment lid, and your remote control console is ready to use.

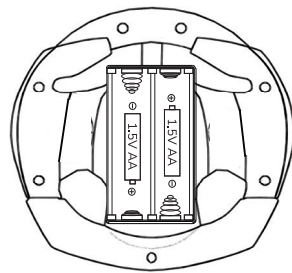

Use 2 x 1.5V "AA" Battery


3. REMOTE PLAYING INSTRUCTIONS

 1. Turn on the toy car by pressing the on/off button on the bottom of the car.
2. Insert the batteries into the remote to start. The LED will stop blinking once the remote is paired.
3. The remote will enter sleep mode after 3 minutes. To wake it up, press any key on the remote.
4. For directional control, use the left button on the controller to move the vehicle forward and backward. Use the right button to turn left or right.
5. For an extra burst of speed, press the Boost (symbol) button to activate the boost function.
6. To activate the smoke exhaust and lights, press the light (symbol) button.

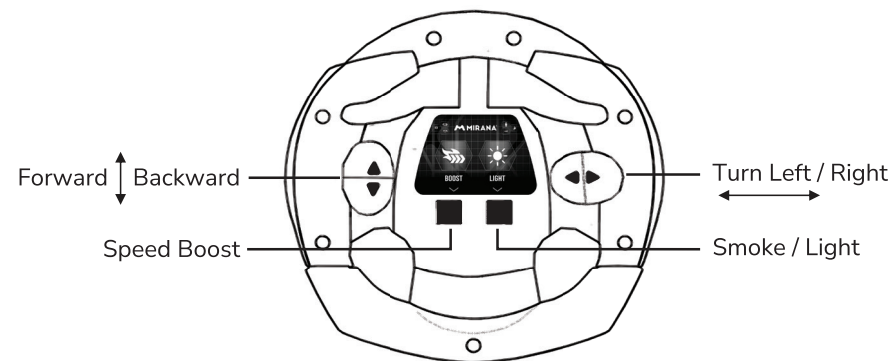

4. SMOKE EXHAUST WATER TANK

 Prior to starting the smoke exhaust, it is essential to verify if there is water in the tank. If the water is used entirely, it should be promptly refilled with the dropper provided in the box. Operating the smoke exhaust without water can potentially reduce its lifespan or cause irreversible damage.

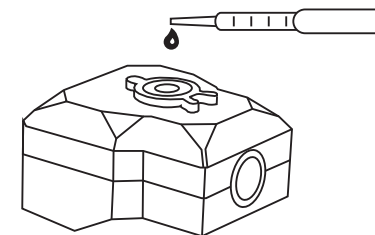

5. SAFETY PRECAUTIONS

The toy should be used by children aged 4 years or above. While using it for the first time, this toy car should be safely set up under adult supervision. Do not try to modify any part of the toy, which may negate your authority to use it.