 


7. CLAP DETECTION

The Clap Detection feature allows your robot to react to sound! If you clap in front of the robot, it will respond by playing phrases or dialogues and will move slightly to acknowledge the interaction.

How It Works:

Clap Activation: Simply clap in front of the robot, and it will instantly react with a sound and movement.

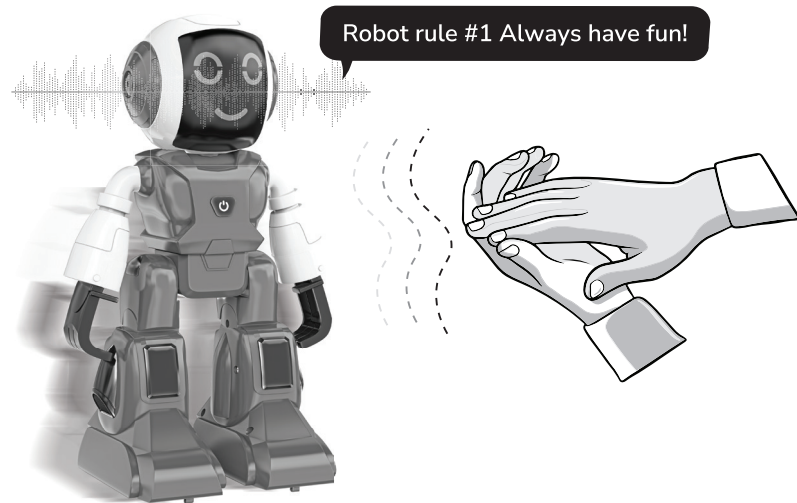

Response: The robot may play a pre-set phrase or dialogue and perform a small movement to indicate it has "heard" the clap.

When Clap Detection is Inactive:

Talkback Mode: Clap detection is temporarily disabled while the robot is in Talkback Mode (when it's actively responding to voice commands).

Music Playing: If music is playing through the robot, the clap detection feature will not activate until the music stops.

8. BATTERY INDICATORS

Low Battery Warning - If the battery is low while using, the toy will indicate it with a low battery sound.

Auto Sleep - To conserve battery, Moon Walker will automatically enter sleep mode after 3 minutes of inactivity. Simply press the Center button to wake him up again.

9. CARE AND MAINTENANCE

Always remove batteries from the remote control console when they have drained out completely or are not in use for a longer period of time. Keep it away from direct sunlight, high humidity, high temperature or excess heat. Ensure that the tires are clean for optimized grip. Gently wipe the tires with a damp cloth whenever they become dirty. Do not immerse the toy or any part of it in water to clean it. This can damage its electronic components. Before using the toy, please ensure that it is not damaged and safe to use.

10. SAFETY PRECAUTIONS

The toy should be used by children aged 3 years or above. While using it for the first time, this toy should be safely set up under adult supervision. Do not try to modify any part of the toy, which may negate your authority to use it. Rechargeable batteries of this toy should be charged under adult supervision only. While charging the toy, do not touch the electric outlet and the charging port with bare/wet hands to avoid electric shock. Adults should examine the USB cable, plug, enclosure or other parts of the toy regularly. Strictly adhere to this instruction manual while operating the toy.

11. DISPOSAL INFORMATION

Never dispose of the toy along with the household waste. If / When you decide to dispose of this toy, discard it in e-waste container that are in accordance with the local environmental laws, guidelines and battery recycling procedures.

Manufactured by / Packed by / Marketed by & Customer Care Executive Address:

MIRANA INNOVATIONS PRIVATE LIMITED
719, Warehouse-5, Titanium Logistics Park, Rajoda, Bavla, Ahmedabad,
GJ, India - 382 220.



www.miranatoys.com



MOON WALKER



BLUETOOTH®
SPEAKER



AR GAME
COMPATIBLE



2.4
GHz
PROPORTIONAL
REMOTE CONTROL



HANDS-FREE
CALLING



TALK
BACK



SPEAKER VOLUME
CONTROL



C-TYPE
USB CHARGING



FOR AGES
3 & ABOVE

WELCOME

Enjoy the flexibility of controlling your Smart Toy using both the dedicated Mirana Mobile App and the included remote control.

Please read this document and the safety instructions carefully before using the all-new smart toy.


www.miranatoys.com

1. BUILT-IN BATTERY

The toy comes with a rechargeable battery. Don't attempt to modify, remove or replace the battery as it may damage it and cause overheating and injury. Don't cut, tear, puncture, compress or deform the toy by disassembling it.

Follow the below instructions for charging its battery:


1. Turn the toy to the rear side to check the charging port.
2. Plug the USB charging cable provided in the box into the (5V-2A) DC input charging slot at the rear side of the toy.
3. Red LED will glow up while charging.
4. Green LED will glow up when the toy is fully charged.
5. Remove the adapter when the Green LED glows up.
6. The toy will not charge if it is on. To charge switch off the toy first.

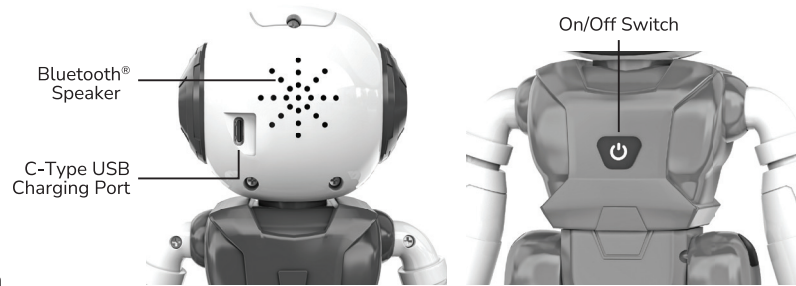

Rechargeable Li-Ion Battery (Included)

2. APP PLAYING INSTRUCTIONS


1. Download the "Mirana" App from the Google Play Store or the App Store for Android and iOS devices, respectively.
2. Turn on the power switch of the toy.
3. Switch on the Bluetooth® of your mobile phone and open the Mirana App installed on your phone.
4. Click on the "Add Toy" button in the Mirana App.
5. Click on the toy in the App to pair it and set a name.
6. Your toy and the Mirana App are now connected. Click on any game to start.
7. For directional control, use the left round button on the console screen to walk the Robot forward and backward. Use the right round button to turn left or right.
8. For full speed forward, you can use the (energy symbol) button to activate the function.
9. To exit the game press on the pause button in top right corner.

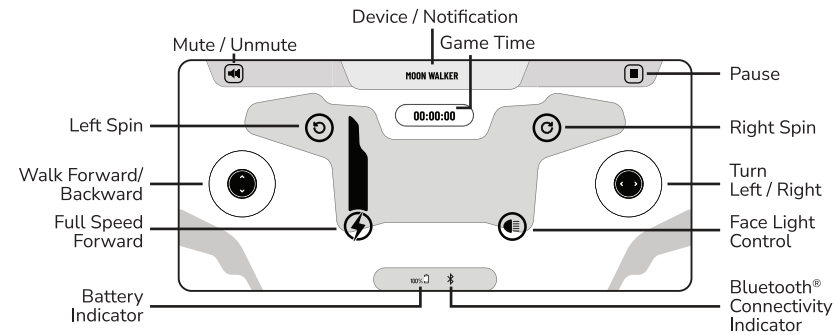

3. REMOTE CONTROL BATTERY INSTALLATION

For the toy remote, you need to install 2 batteries of 1.5V "AAA" type.


1. Carefully install new batteries (+/-) inside the compartment.
2. Securely place the battery compartment lid, and your remote control console is ready to use.

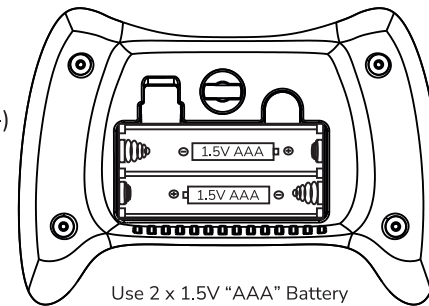

Use 2 x 1.5V "AAA" Battery

4. REMOTE PLAYING INSTRUCTIONS

1. Turn on the remote and turn on the robot. The lights will stop blinking when the remote is connected.
2. For directional control, use the left joystick on the controller to walk the robot forward and backward. Use the right joystick to turn left or right.
3. For full speed forward, you can use the "UP" button to activate the function.
4. The "Down" button can be used to On/Off Music.

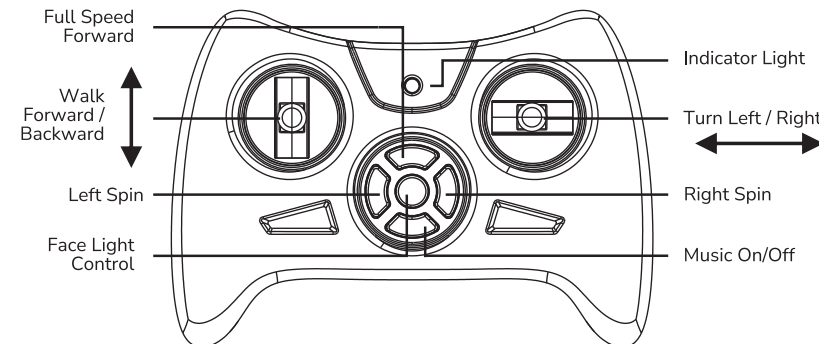


5. Use the "Right" button to perform the 360° Right Spin and the "Left" button to perform the 360° Left Spin.
6. To control robot face light, Press the "Center" button.
7. Press the "Center" button with the "Right Spin" button to increase the volume, and press the "Center" button with the "Left Spin" button to decrease volume.

5. BLUETOOTH® SPEAKER

Before pairing, ensure the toy is fully charged. Follow the charging instructions provided in the user manual.

1. On your smartphone, tablet, or other Bluetooth®-enabled device, navigate to the Bluetooth® settings. Ensure Bluetooth® is turned on.
2. Once the toy appears in the list of available devices, it will be named something like "MX_MT (AUDIO)". Tap the name of the toy to connect.
3. Once paired, any audio playing on the device can be streamed through the robot.

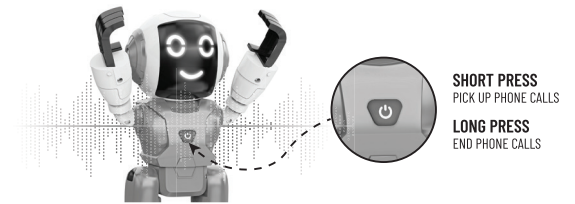

Answering Calls: If you receive a call while the toy is connected to your phone, the audio will pause, and the speaker will ring. Moon Walker have a built-in microphone and a power button to answer calls. Pressing this button will let you pick up the call, allowing you to speak hands-free through the robot.

Ending Calls: After finishing the conversation, you can long press the power button to end the call. The speaker will then return to playing music or remain idle.

6. TALK BACK

Short Press: Press the button briefly, and the Talkback function will activate, allowing you to record your voice for up to 6 seconds. After recording, the toy will repeat what you said. This works even while music is playing from your mobile phone. If music is playing, pressing the button will automatically stop the music and start recording.

Long Press: To disable the Talkback feature, simply press and hold the button. This will turn off Talkback functionality.

