

5. CARE AND MAINTENANCE

Always remove batteries from the remote control console when they have drained out completely or are not in use for a longer period of time. Keep it away from direct sunlight, high humidity, high temperature or excess heat. Ensure that the tires are clean for optimized grip. Gently wipe the tires with a damp cloth whenever they become dirty. Do not immerse the toy or any part of it in water to clean it. This can damage its electronic components. Before using the toy car, please ensure that it is not damaged and safe to use.

6. SAFETY PRECAUTIONS

The toy should be used by children aged 3 years or above. While using it for the first time, this toy car should be safely set up under adult supervision. Do not try to modify any part of the toy, which may negate your authority to use it. Rechargeable batteries of this toy car should be charged under adult supervision only. While charging the toy, do not touch the electric outlet and the charging port with bare/wet hands to avoid electric shock. Do not use damaged electric outlets for charging batteries. Adults should examine the USB cable, plug, enclosure or other parts of the toy regularly. Strictly adhere to this instruction manual while operating the toy.

7. DISPOSAL INFORMATION

Never dispose of the toy along with the household waste. If / When you decide to dispose of this toy car, discard it in e-waste container that are in accordance with the local environmental laws, guidelines and battery recycling procedures.

Manufactured by:

MIRANA INNOVATIONS PRIVATE LIMITED

201, Plot No. T33, T Block, MIDC Road, Bhosari, Pune, MH, India - 411 026.

For Feedback and complaints, contact us at support@miranatoys.com



www.miranatoys.com



WATCH REMOTE TRACER



C-TYPE USB
RECHARGEABLE



AR GAME
FRIENDLY



BLUETOOTH®
SPEAKER IN-BUILT



PRE-LOADED
ENGINE SOUND



BUILDS HAND-EYE
COORDINATION



PROPORTIONAL
SPEED CONTROL



1.5X HIGH
SPEED BOOST



SKIN FRIENDLY
SILICON BELT



HEAD LIGHT
CONTROL



CHROME
WHEELS



3+
FOR AGES
3 & ABOVE



1:20
SCALE

WELCOME

Enjoy the flexibility of controlling your Smart Toy using both the dedicated Mirana Mobile App and the included remote control. Choose the method that suits your play style and switch seamlessly between them.


Please read this document and the safety instructions carefully before using the all-new smart toy car.

www.miranatoys.com

1. BUILT-IN BATTERY

The toy comes with a rechargeable 1200 mAh battery. Don't attempt to modify, remove or replace the battery as it may damage it and cause overheating and injury. Don't cut, tear, puncture, compress or deform the toy by disassembling it. Follow the below instructions for charging its battery:

1. Turn the toy upside down to check the charging port.
2. Plug the USB charging cable provided in the box into the (5V-2A) DC input charging slot at the bottom of the toy.
3. Red LED will glow up while charging.
4. Green LED will glow up when the toy is fully charged.
5. Remove the adapter when the Green LED glows up.
6. The toy will not charge if it is on. To charge switch off the toy first.

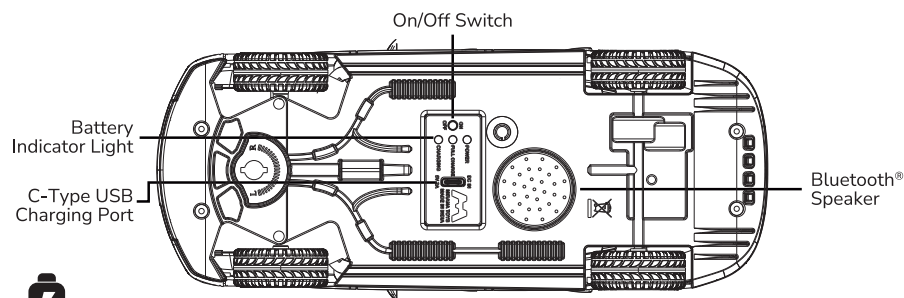


1200 mAh Rechargeable Li-Ion Battery (Included)

2. APP PLAYING INSTRUCTIONS

1. Download the "Mirana" App from the Google Play Store or the App Store for Android and iOS devices, respectively.
2. Turn on the power switch of the toy given its bottom.
3. Switch on the **Bluetooth®** of your mobile phone and open the Mirana App installed on your phone.
4. Click on the "Add Toy" button in the Mirana App.
5. Click on the toy in the App to pair it and set a name.
6. Your toy and the Mirana App are now connected. Click on any game to start.
7. For directional control, use the left round button on the console screen to move the vehicle forward and backward. Use the right round button to turn left or right.
8. For an extra burst of speed, you can use the (energy symbol) button to activate the Boost function.
9. To exit the game press on the pause button in top right corner.

3. REMOTE PLAYING INSTRUCTIONS

1. Wear and adjust the Watch Remote belt to accommodate your left or right hand preference.
2. Turn on the toy using the switch located at the bottom and place it on a flat surface.
3. Switch on the power button of the toy, white lights will start blinking, indicating the connection process.
4. Once the remote is successfully connected to the toy, it will assume manual control in the default mode.
5. For directional control, Press the forward arrow to move it forward, the down arrow for reverse, the left arrow for left turns, and the right arrow for right turns.
6. The finger controller features two buttons, 'A' and 'B', Pressing 'A' activates boost mode, enabling the car to run faster. Short press 'B' to turn on the Engine Sound and Long press the 'B' to activate the horn.

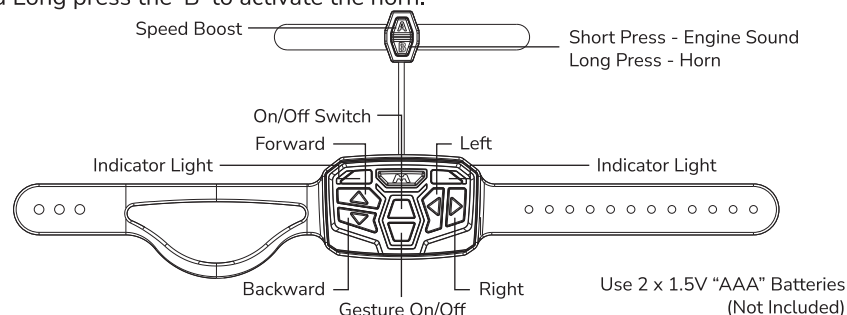

4. GESTURE MODE

1. To switch to gesture control mode, press the mode button on the Watch Remote. The lights will blink for 2 seconds to confirm the mode change.
2. In gesture mode, adjust your hand movements to control the car.
3. The lights on the Watch Remote indicate the car's actions. Two green lights illuminate when the toy moves forward, two red lights when it backward. The left blue light indicates a left turn, and the right blue light indicates a right turn.



Forward



Backward



Turn Right



Turn Left

4. When the toy is not connected to the remote, the headlights will blink. When connected and stationary, the rear indicator lights will blink.